



F, FN, MU, FE, and DE Series

Standard Lock-In Jamb Anchors are supplied on standard F Series frames having 2" faces

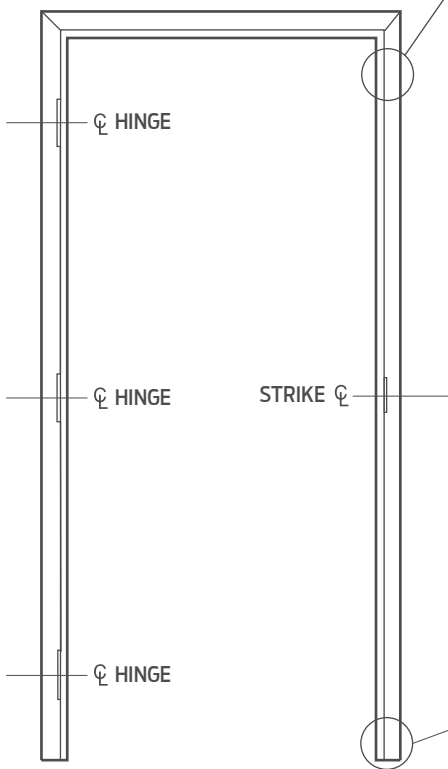


Masonry Wall Applications


Wire Masonry Anchor

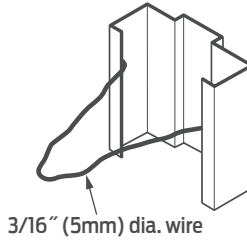

Masonry "T" Anchor

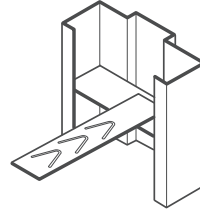


Existing Wall Anchor

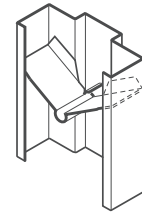


Stud Wall Applications


Universal Stud Anchor

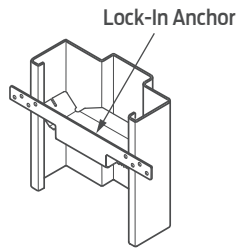

Anchor for Steel Stud Partition

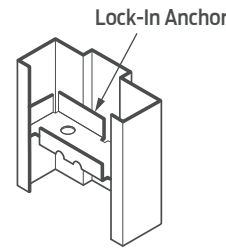


Anchor for Wood Stud Partition

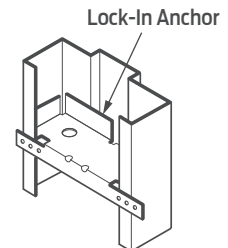

Adjustable Sill Anchors are provided as standard

Attached with S.M. screws furnished

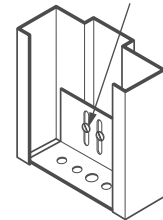

Maximum adjustment
1-3/8" (35mm)
below bottom of frame

Anchor Quantities:


- 3 per jamb through 7'6" height
- 4 per jamb over 7'6" to 12'0" height
- 1 adjustable base anchor per jamb

Anchor Locations:


- Locate all anchors on hinge jamb as close to top of hinge reinforcement as possible.
- Locate anchors on strike jamb in the corresponding position as the hinge jamb.

Specialty Weld-In Jamb Anchors are supplied for custom frames and special wall applications when specified.


Masonry Wall Application

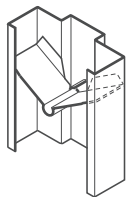

Existing Wall Anchor

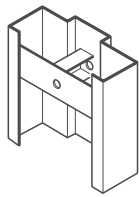


Weld-In Tube & Strap Anchor for Special Profile Frames

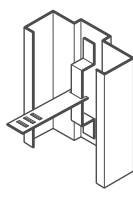


Weld-In Yoke Strap & Masonry Anchor

Stud Wall Anchors

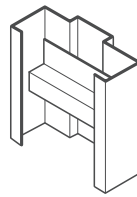


"Z" Steel Stud Weld-In Anchor for Special Profile Frames

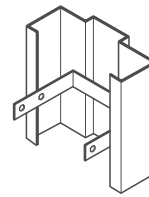


Weld-In Wood Stud Anchor

Sill Anchors

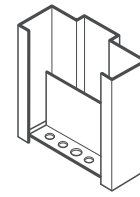


Weld-In Floor Anchor

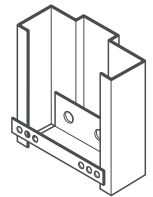


Weld-In Wood Stud Base Anchor

DW and K Series

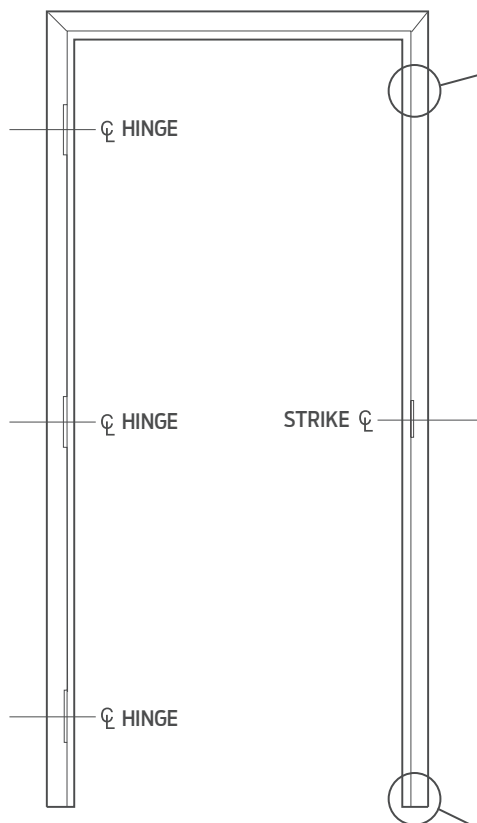


Standard Field Adjustable Compression Jamb Anchors are supplied as standard for DW & K Series frames having 2" faces

Stud Wall Applications (refer to page 93)

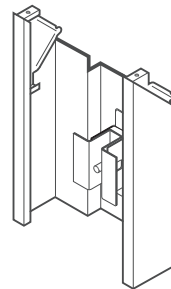

Jamb/Compression Anchor (refer to page 93)

Optional Security Applications (refer to page 93)

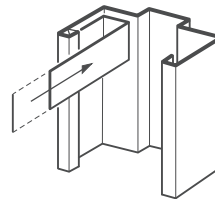

Anchor Quantities:

- 1 compression anchor per jamb through 9" depth
- 2 compression anchors per jamb for 9" depth and greater
- 2 twist-in strap base anchors per jamb


Anchor Locations:

- Compression anchors are factory installed near the top of each jamb.
- The twist-in anchors are installed into the Base Anchor Attaching Strap that is factory installed at the bottom of each jamb.


Anchor Options:

- Security Jamb Anchor
 - See description on the previous page
 - See details on Page 93

Either Adjustable Sill Anchors or Counter Sunk Sill Anchor Holes are provided as standard

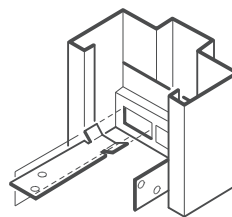

DW Series Adjustable Lock-in Base Anchor (refer to page 94)

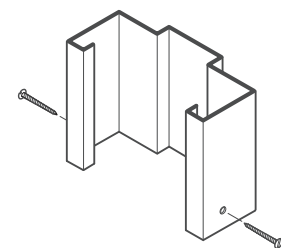

K Series Base Anchor (refer to page 94)